

What to do if...
What to do if...



A tire punctures

P. 521 If you have a flat tire



The hybrid system does not start

P. 530 If the hybrid system will not start

P. 96 Immobilizer system

P. 536 If the vehicle 12-volt battery is discharged



The engine coolant temperature warning light flashes or come on

P. 541 If your vehicle overheats



Steam can be seen coming from under the hood



The key is lost

P. 532 If you lose your keys



The 12-volt battery runs out

P. 536 If the vehicle 12-volt battery is discharged



The doors cannot be locked

P. 57 Doors



The horn begins to sound

P. 98 Alarm



The vehicle is stuck in mud or sand

P. 545 If the vehicle becomes stuck






















A warning light or indicator light comes on

P. 492 If a warning light turns on or a warning buzzer sounds...



nWarning lights

BRAKE Brake system warning light (red indicator) or 	AFS OFF "AFS OFF" indicator light P. 494 
 Charging system warning light P. 492	LKA "LKA" indicator light P. 494 
 High engine coolant temperature warning light P. 493	 Cruise control indicator light P. 494
 Brake system warning light (yellow indicator) P. 493	 Radar cruise control indicator light P. 494
 Malfunction indicator lamp CHECK or  P. 493	 Open door warning light P. 495
 SRS warning light P. 493	 Low fuel level warning light P. 495
ABS "ABS" warning light or  P. 493	 Driver's seat belt reminder light P. 495
 Electric power steering system warning light P. 494	 Front passenger's seat belt reminder light P. 495
PCS Pre-collision system warning light P. 494	 Master warning light P. 495
	 Tire pressure warning light P. 496

